
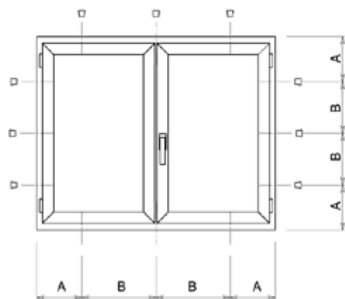
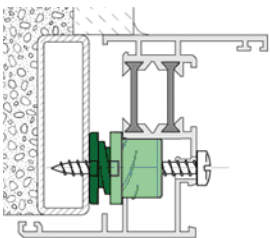
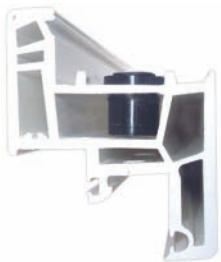


FFI Rapid Spacers

for Aluminum & PVC/Vinyl frames

Functional Fenestration Inc (FFI) offers a new method for installing and adjusting doors and windows - faster, easier and more accurate. Reduce the potential for faulty field installations.

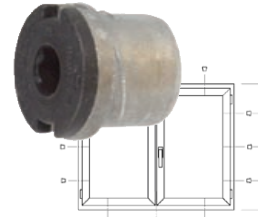

A = 100 + 150 mm
B = 500 mm Max

- applications: for aluminum, PVC or vinyl door or window frames.
- field installation is fast and accurate.
- easy future readjustment to keep the frame plumb and level.
- low labor cost for field installation and service.
- cost-effective, with volume discounts available.
- call FFI Customer Service for technical files and ordering assistance.

Rapid Spacers for aluminum and PVC/vinyl frame windows & doors

- some sample options are shown below; many more available.
- use screws of length and material to suit frame (screws not included).
- accessories and installation tools also available.



series 40 - spacers for Aluminum frames
RB001, RB025, RB044, RB063 and more models



series 400 - spacers for Aluminum or PVC frames
RB300, RB304, RB307 and more models



series 600 - spacers for Aluminum frames
RB601, RB602, RB605, RB642 and more models



series 700 - spacers for PVC frames
RB701, RB702, RB705 and more models



series 800 - spacers for Aluminum or PVC frames
RB341, RB342, RB345 and more models

Please visit www.fenestration.net, see **Product Overview** page for Rapid Spacers/product info.


Contact **FFI Customer Service** for product details and pricing for rapid-block spacers:
800-677-0228 or service@fenestration.net.

Manufacturers: volume discounts and inventory consignment agreement plans are available from FFI.

FFI Rapid Spacers

for WOOD frames



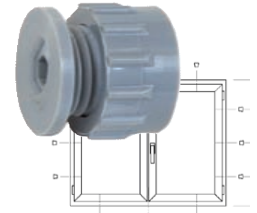

Functional Fenestration Inc (FFI) offers a new method for installing and adjusting doors and windows - faster, easier and more accurate. Reduce the potential for faulty field installations.




- applications: installing wood door jambs or window frames in rough openings, setting to plumb and level.
- field installation is faster with greater accuracy than wood shims.
- easy future readjustment, without doing damage by reshimming.
- lower labor cost for field installation and service.
- cost-effective, with volume discounts available.

Rapid Spacers - for wood windows and doors

- at least 6 rapid-block spacers are recommended per rough opening: (2 for the bottom, 2 for each side).
- use screws of length and material to suit frame (screws not included).

part #	description	notes
 RB501	rapid-block spacer for wood	25mm Min. frame thickness (approx. 1")
 RB502	rapid-block spacer for wood	30mm Min. frame thickness (approx. 1-3/16")
 RB510	rapid-block spacer for wood	25mm Min. frame thickness (approx. 1")
 RB511	rapid-block spacer for wood	30mm Min. frame thickness (approx. 1-3/16")

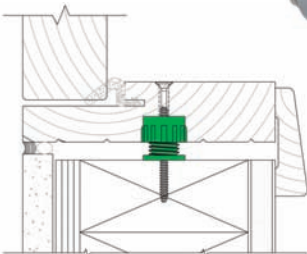

Installation tools for wood frames are available:

- RH004 hexagonal T-key installation tool
- RP004 drill bit - to install spacer RB501
- RP005 drill bit - to install spacer RB502
- RP039 drill bit - to install spacer RB511

Please visit www.fenestration.net, see **Product Overview page** for Rapid Spacers/product info.

Contact **FFI Customer Service** for product Data Sheet and pricing for rapid-block spacers:
800-677-0228 or service@fenestration.net.

Manufacturers: volume discounts and inventory consignment agreement plans are available from FFI.