
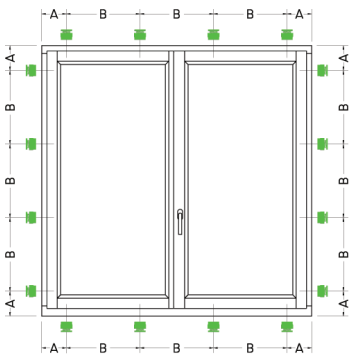
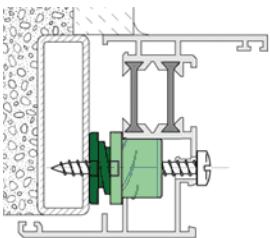


FFI Rapid Spacers

for Aluminum & PVC/Vinyl frames

Functional Fenestration Inc (FFI) offers a new method for installing and adjusting doors and windows - faster, easier and more accurate. Reduce the potential for faulty field installations.

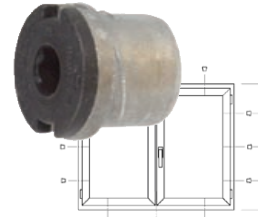

- Applications: for aluminum, PVC or vinyl door or window frames.
- Field installation is fast and accurate.
- Easy future readjustment to keep the frame plumb and level.
- Low labor cost for field installation and service.
- Cost-effective, with volume discounts available.
- Companies using Proni Rapid-Block Spacers include Kolbe & Kolbe, Kommerling, Rehau, Veka, & more. Rapid spacers passed Miami Dade Building Code tests for high velocity hurricane zones.
- Call FFI Customer Service for technical files and ordering assistance.

Rapid Spacers for aluminum and PVC/vinyl frame windows & doors

- Some sample options are shown below; many more available.
- Use screws of length and material to suit frame (screws not included).
- Accessories and installation tools also available.



series 40 - spacers for Aluminum frames
RB001, RB025, RB044, RB063 and more models



series 400 - spacers for Aluminum or PVC frames
RB300, RB304, RB307 and more models



series 600 - spacers for Aluminum frames
RB601, RB602, RB605, RB642 and more models



series 700 - spacers for PVC frames
RB701, RB702, RB705 and more models



series 800 - spacers for Aluminum or PVC frames
RB341, RB342, RB345 and more models

Visit www.fenestration.net, see **Product Overview page** for Rapid Spacers/product info.


Manufacturers: volume discounts and inventory consignment agreement plans are available from FFI.

Contact FFI Customer Service for product Data Sheet, CAD files, and pricing for rapid-block spacers:
800-677-0228 or service@fenestration.net.

FFI Rapid Spacers

for WOOD frames

Functional Fenestration Inc (FFI) offers a new method for installing and adjusting doors and windows - faster, easier and more accurate. Reduce the potential for faulty field installations.

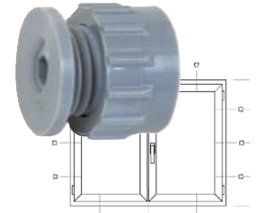


- Applications: installing wood door jambs or window frames in rough openings, setting to plumb and level.
- Field installation is faster with greater accuracy than wood shims.
- Easy future readjustment, without doing damage by reshimming.
- Lower labor cost for field installation and service.
- Companies using Proni Rapid-Block Spacers include Kolbe & Kolbe, Kommerling, Rehau, Veka, & more. Rapid spacers passed Miami Dade Building Code tests for high velocity hurricane zones.



Rapid Spacers - for wood windows and doors

- At least 6 rapid-block spacers are recommended per rough opening; see data sheet.
- Use screws of length and material to suit frame (screws not included).

	part #	description	diameter	minimum frame thickness
	RB501	rapid-block spacer for wood	23mm	25mm (1")
	RB502	rapid-block spacer for wood	23mm	30mm (1-3/16")
	RB510	rapid-block spacer for wood	16mm	25mm (1")
	RB511	rapid-block spacer for wood	23mm	30mm (1-3/16")
	RB520	rapid-block spacer for wood	23mm	20mm (3/4")

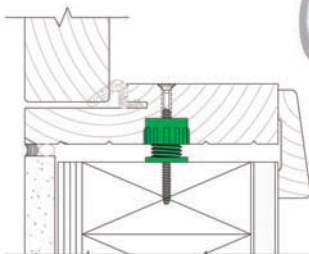

Installation tools for wood frames are available.
Ask for Data Sheet and CAD files.



Visit www.fenestration.net, see **Product Overview page** for Rapid Spacers/product info.

Manufacturers: volume discounts and inventory consignment agreement plans are available from FFI.

Contact FFI Customer Service for product Data Sheet, CAD files, and pricing for rapid-block spacers:
800-677-0228 or service@fenestration.net.